



INSTRUCTION :




Cut off the wire end crimps from the end of the inner brake cables.

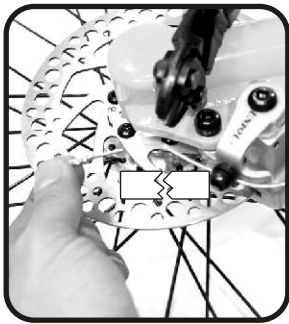

Loosen the inner brake cables from the brake calipers.

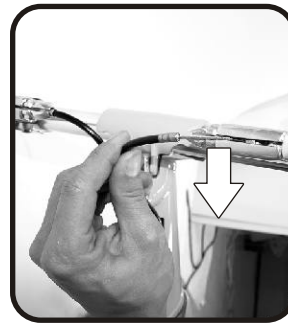


Remove both inner brake cables from both brake levers.(1)

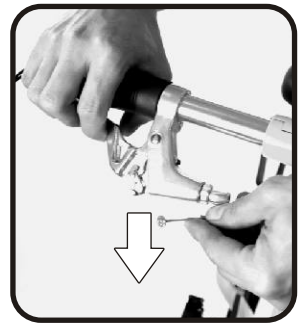


Remove both inner brake cables from both brake levers.(2)




First open quickrelease (215-06) and loosen bolt no 262 by rotating it twice counter clockwise.

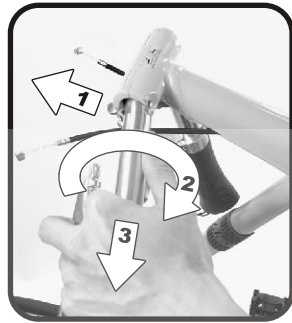


By simply rotating and pulling, you can remove both the handlebars. Note: don't use too much force.

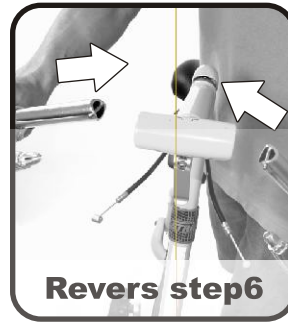


By following the same process in reverse the bended steer can be installed.

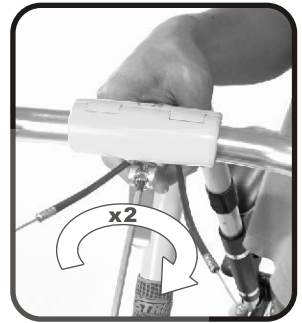

Tighten part nr. 262 by rotating clockwise twice.

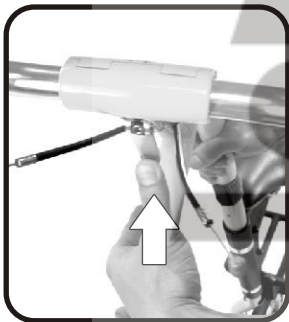

Lock the quick release lever.

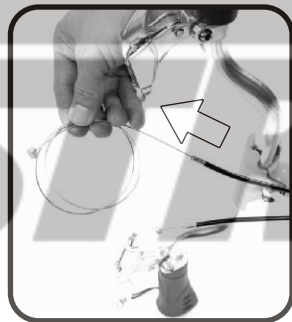

Remove the inner brake cables from the outer brake cables.



Connect the outer cable extensions to the existing outer brake cables using the connectors supplied. Insert the new inner brake cables.



Connect the new inner brake cables to both brake levers.(1)



Connect the new inner brake cables to both brake levers.(2)



Connect the other ends of the new inner brake cables to both brake calipers.



Tighten screw on brake calipers to secure inner brake cables.



Cut off surplus from inner brake cables.



Slide new wire end crimps onto the end of the inner brake cables and apply pressure to secure them.

★ **cable extenders**

★ **connectors**

Assure yourself that all bolts are tightened firmly before riding.
Enjoy your new Strida upgrade!