

INSTRUCTION :


F



Unscrew 1x part nr 240-04-15 totally.



Loosen 1x part number 240-04-15.

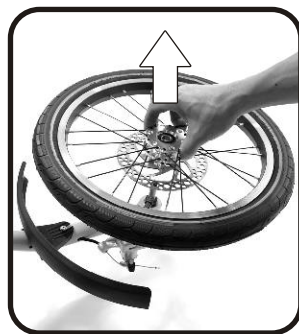

Rotate part nr. 240-05 around the loose 240-04-15 part and pull of the front wheel after you have removed 375.



Remove the mudguard.



Apply the new 18" frontwheel.



Apply part nr. 276+236+376+469+375 and tighten it.



Rotate part 240-04 back and tighten part nr 240-04-15 again.



Tighten the other loose 240-04-15 again.

R



Derail the belt with i.e. a screwdriver.




Unscrew 1x part nr 340-04-15 totally.




Loosen 1x part number 340-04-15 and rotate part nr. 340-05 around the loose 340-04-15 part.



Removed 379 and its components.

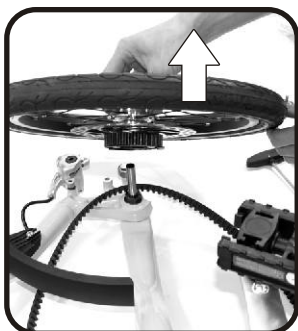

Pull of the rear wheel.

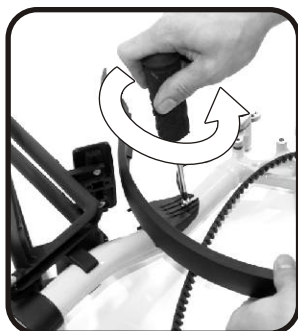

Remove the mudguard.



Press the belt in the freewheel while you apply the new 18" rear wheel.



Apply 379 and its components and tighten it.



Rotate the 340-05 part back and tighten the 340-04-15.



Apply the belt on the front pulley.

Assure yourself that all bolts are tightened firmly before riding.
Enjoy your new Strida upgrade!

Please refer to exploded drawing for part No in owner manual
18" PSI : 70~115
5.0~8.0 bar
Please check inflation

STRIDA
a whole new way to move